

SRT7GT

User Manual

Features

- · Designed for use in law enforcement, hunting and tactical applications.
- The world's first line of flashlights to feature third generation SSR (smart selector ring) technology
- · Smoothly and rapidly select brightness levels and function by rotating a smart selector ring
- Utilizes a CREE XP-L HI V3 LED for a maximum output of up to 1000 lumens
- Second generation of 'Crystal Coating Technology' along with 'Precision Digital Optics Technology' provide extreme reflector performance
- Boasts a peak beam intensity of 50900cd and a throw distance of up to 450 meters (ANSI FL1)
- High efficiency circuit board provides up to 240 hours runtime on the lowest output level
- · Equipped with unique multi-colored (red, green and blue) tactical / signaling lights
- Versatile 500mW ultraviolet light at 365nm wavelength
- · Infinite brightness adjustment from 0 to 1000 lumens
- · 7 rapidly switchable functions to select from
- · Multi-functional power indicator light displays low battery status
- · Patented spring-loaded impact absorption mechanism with reverse polarity protection
- Stainless steel titanium-plated two-way clip
- Stainless steel retaining ring protects core components from damage
- · Toughened ultra-clear mineral glass with anti-reflective coating
- Constructed from aero grade aluminum alloy
- · Robust HAIII military grade hard-anodized
- · Waterproof in accordance with IPX8 (two meters submersible)
- · Impact resistant to 1.5 meters
- · Tail stand capability

Dimensions

Accessories

holster,clip,lanyard,spare O-ring, spare tactical ring,spare tail cover

Length: 158mm (6.22") Head diameter: 40 mm (1.57") Tube diameter: 25.4mm (1") Weight: 173g (6.1oz)(without battery)

Battery Options	TYPE	Nominal voltage	Compatible
Primary Lithium battery	CR123	3V	Y (Recommended)
18650 Rechargeable Li-ion battery	18650	3.7V	Y (Recommended)
Rechargeable Li-ion battery	RCR123	3.7V	Y

Output & Runtime

Output & Numme									
FL1 STANDARD	TURBO	ULTRALOW	RED	GREEN	BLUE	UV			
シャ	1000 LUMENS	0.1 LUMENS	13 LUMENS	19 LUMEN	3 LUMENS	_			
18650	1h15min	240 h	28h	26h	26 h	26 h			
2×crizs	1h	130h	19h	18h	18h	18h			
	450m(Beam Distance)								
	50900cd(Peak Beam Intensity)								
N.	1.5m(Impact Resistant)								
	IPX8, 2m (Waterproof AND Submersible)								

NOTICE

The above data has been measured in accordance with the international flashlight testing standards ANSI/NEMA FL1 using one x 3.7V 3400mAh 18650 battery and 2 x 3V 1700mAh CR123 batteries under laboratory conditions. The data may vary slightly during real-world use due to battery type, individual usage habits and environmental factors.

*Infinite brightness adjustment varies from 0.1 to 1000 lumens and is manually adjusted by rotation of the Smart Selector Ring. Subsequently, runtimes will vary anywhere from 75 minutes to 240 hours depending on chosen level of output.

Battery Installation

Insert one 18650 battery or two CR123 batteries with the positive pole pointing forward (toward the light head).

NOTE:

- Ensure batteries are inserted with the positive (+) end pointing to the head. The SRT7 will not operate with incorrectly inserted batteries.
- 2. Ensure when turning the SRT7 on, the beam is directed away from the eyes of people or animals.

On/Off

To switch ON: Press the button on the tailcap until a "click" is heard.


To switch OFF: Press the button on the tailcap a second time until a "click" is heard.

Momentary Illumination

Momentary illumination can be achieved by switching the flashlight off and then half pressing and holding the tail switch. Release switch to turn the light off.

Adjusting Output

With the light turned on, slowly rotate the Smart Selector Ring (adjacent to the bezel) in a counter-clockwise direction to cycle through the following brightness levels: Beacon -> Police warning signal -> Blue mode -> Green mode -> Red mode -> Ultraviolet light-> Standby mode -> Infinite brightness modes -> Turbo mode -> Strobe mode. These modes may be cycled through in reverse by rotating the Smart Selector Ring in a clockwise direction.

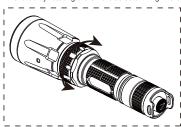

Note:

Note:

When in standby mode, the SRT7GT will draw a small amount of current from the battery to maintain the operation of its micro-processor. The blue power indicator located on the head portion will blink once every 2 seconds to serve as a positioning light when the torch is standing by.

ATR

The SRT7GT come with a Advanced Temperature Regulation module, allowing the SRT7GT to regulate its output and adapt to the ambient environment, therefore maintaining optimal performance.

Power Tips

- With the light switched on, the power indicator will blink once every two seconds when power levels reach 50%.
- 2. With the light switched on, the power indicator will blink rapidly when power levels are low

Changing Batteries

When the power indicator blinks rapidly it means the batteries need to be replaced. Alternatively if the light becomes dim or unresponsive to adjustment this also indicates batteries need to be replaced.

Maintenance

Every 6 months, wipe the threads with a clean cloth followed by a thin coating of silicon-based lubricant.

Warranty Details

Our authorized dealers and distributors are responsible for warranty service. Should any problem covered under warranty occurs, customers can contact their dealers or distributors in regards to their warranty claims, as long as the product was purchased from an authorized dealer or distributor. NITECORE's Warranty is provided only for products purchased from an authorized source. This applies to all NITECORE products.


Any DOA / defective product can be exchanged for a replacement through a local distributor/dealer within the 15 days of purchase. After 15 days, all defective / malfunctioning NITECORE® products can be repaired free of charge for a period of 60 months (5 years) from the date of purchase. Beyond 60 months (5 years), a limited warranty applies, covering the cost of labor and maintenance, but not the cost of accessories or replacement parts.

The warranty is nullified if the product(s) is/are broken down, reconstructed and/or modified by unauthorized parties, or damaged by batteries leakage. For the latest information on NITECORE® products and services, please contact a local NITECORE® distributor or send an email to service@nitecore.com.

※All images, text and statements specified herein this user manual are for reference purpose only. Should any discrepancy occurs between this manual and information specified on www.nitecore.com. Sysmax Industry Co., Ltd. reserves the rights to interpret and amend the content of this document at any time without prior notice.



/SYSMAX ind. SYSMAX Industry Co., Ltd.

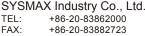

FAX: +86-20-83882/23 E-mail: info@nitecore.com Web: www.nitecore.com

Address: Rm1401-03, Glorious Tower, 850 East Dongfeng Road,

Guangzhou, China 510600

(€ 🕱